SECTION 9: Parts List

CONTENTS

1. Top View 9-1

2. Non-Operator Side 9-2

3. Structural Parts 9-3

4. Wiring Diagram 9-4

5. Parts List 9-5

Parts List

1. Top View

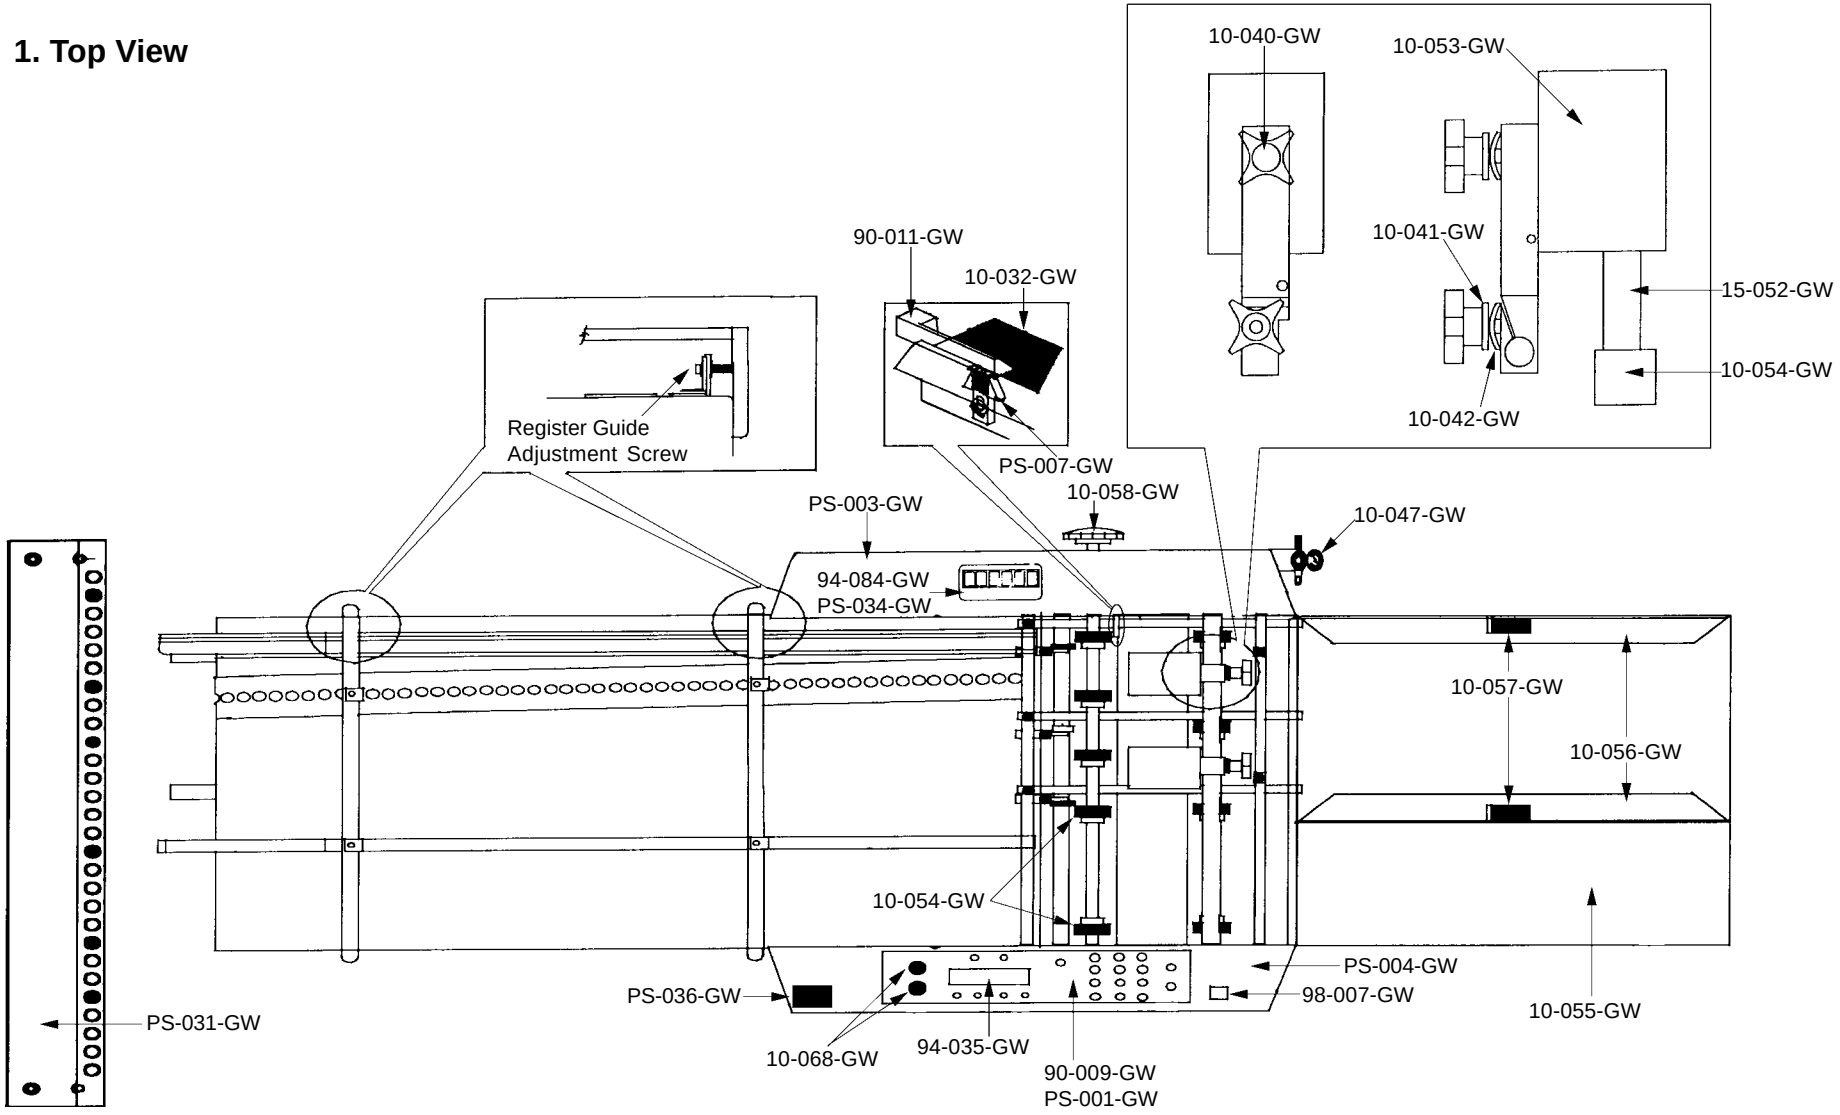

2. Non-Operator Side

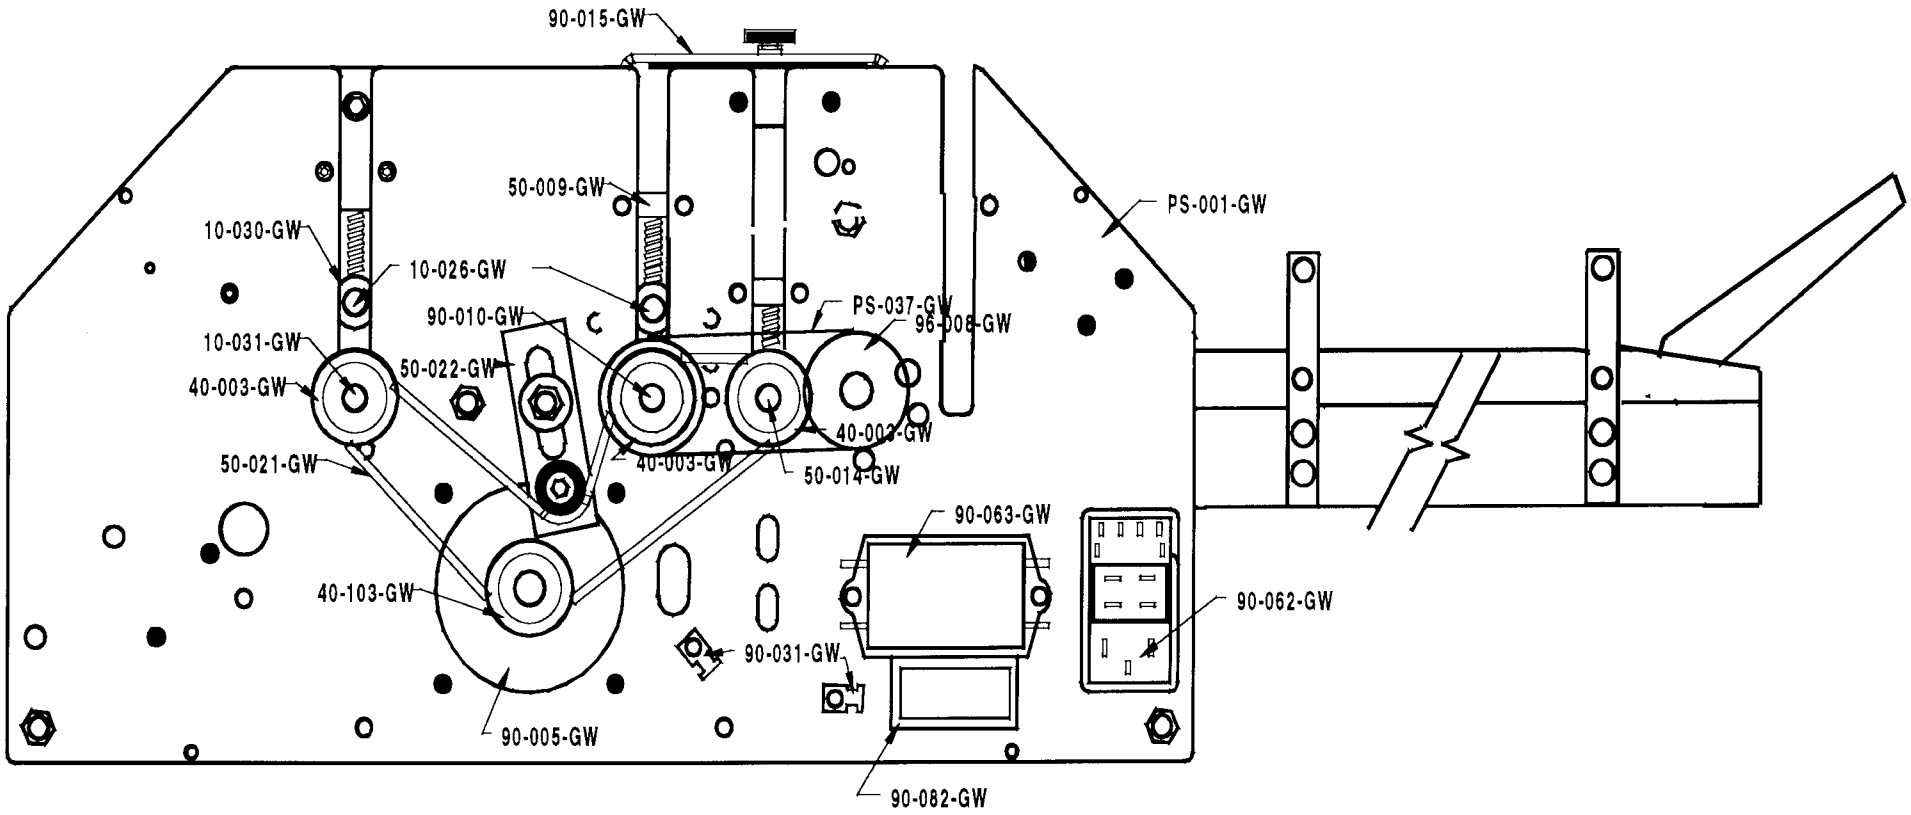

3. Structural Parts

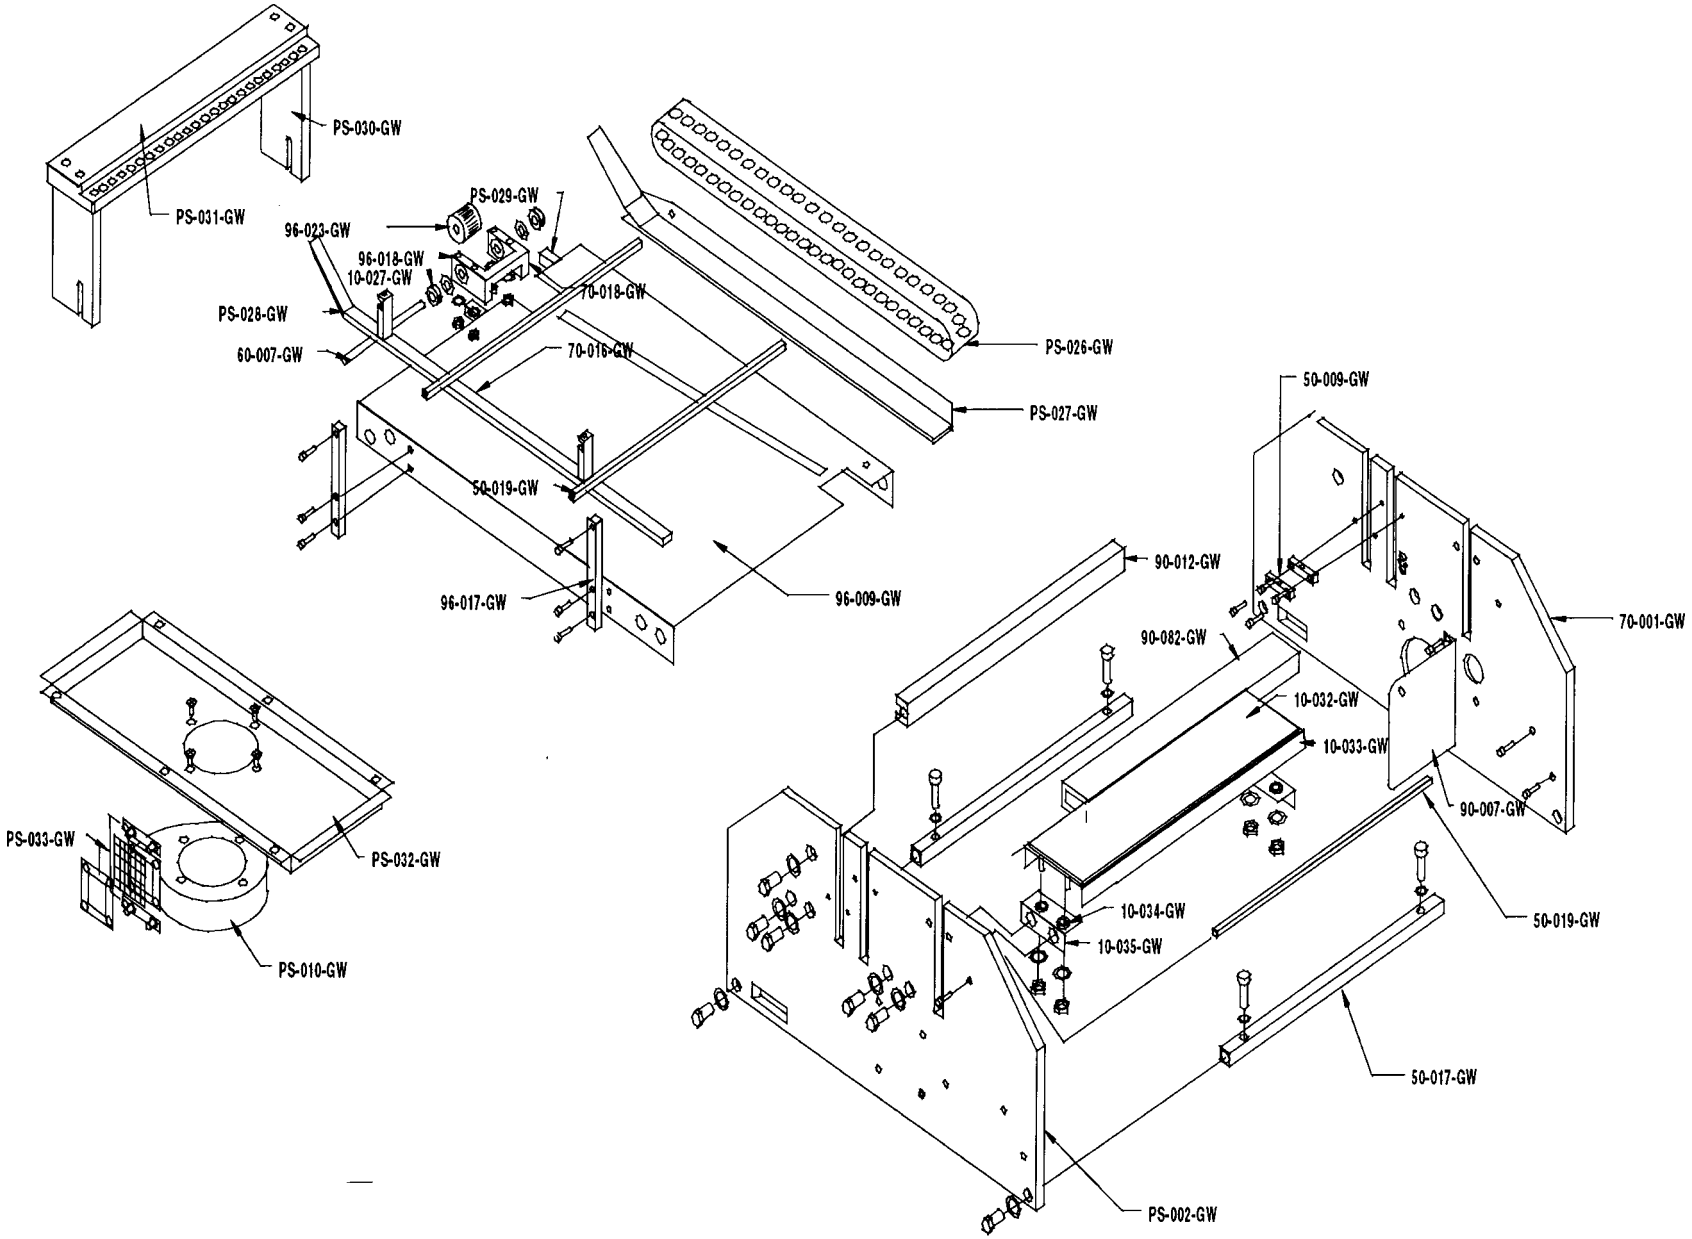

4. Electrical System

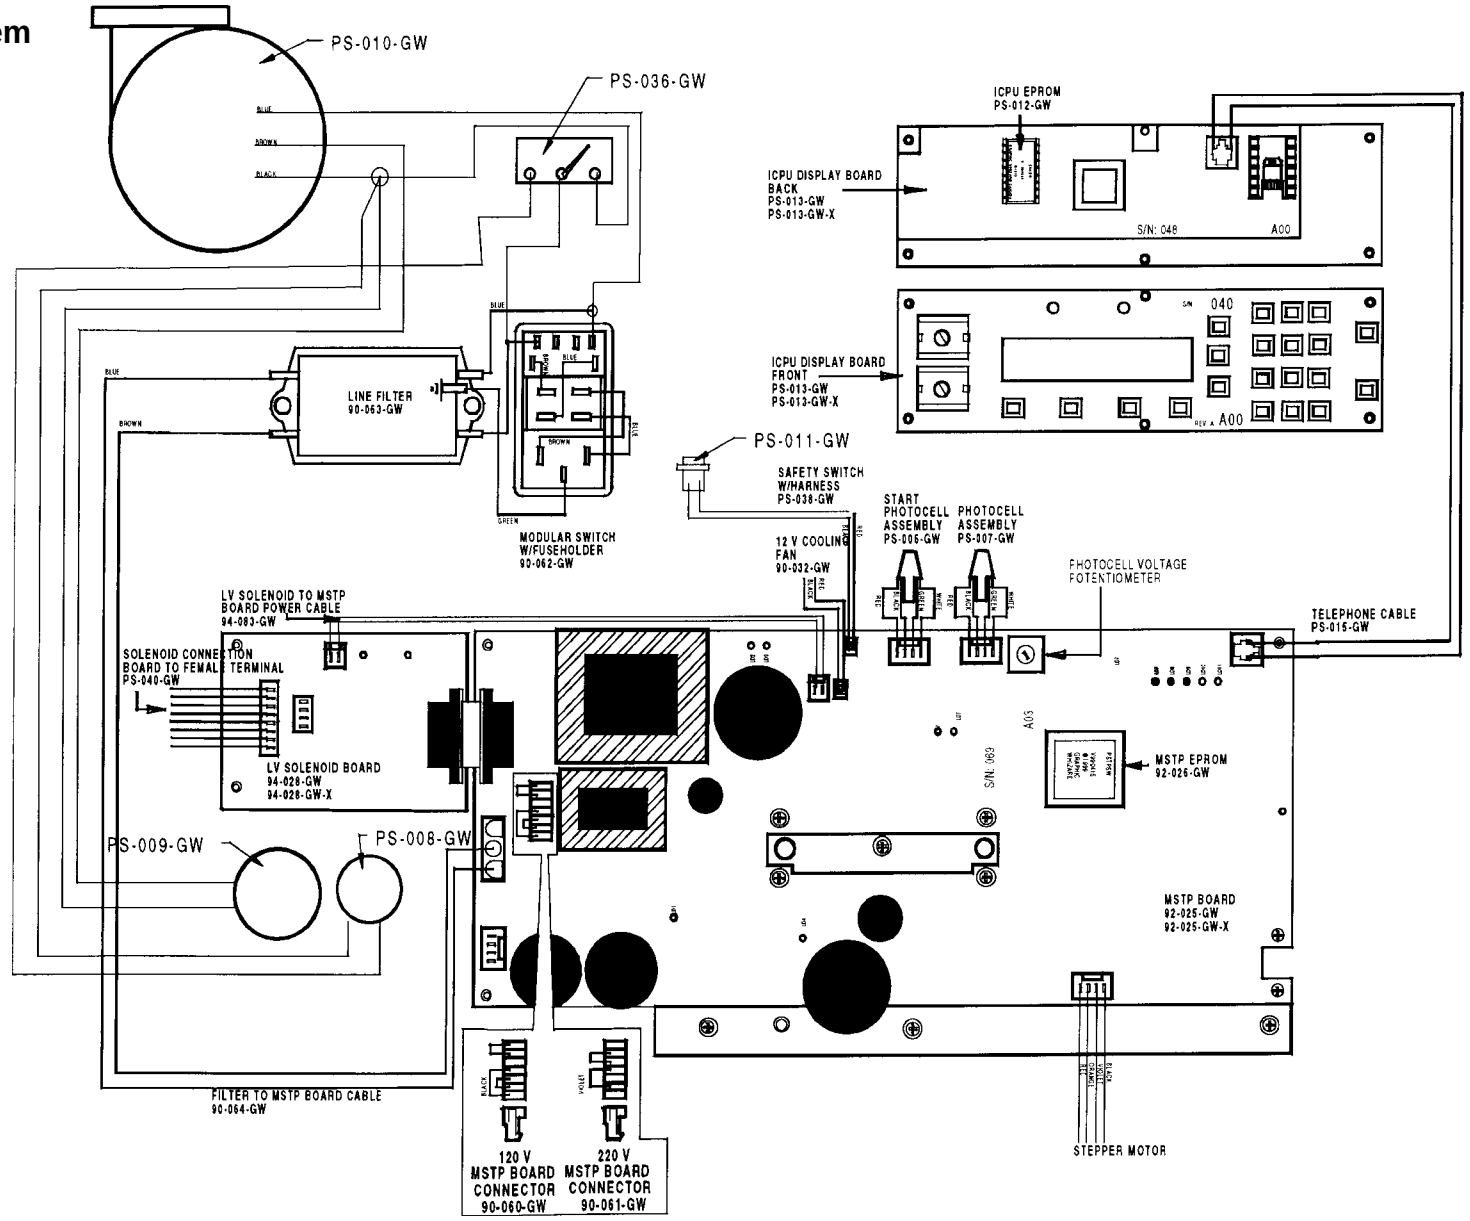

5. Parts List

Part #	Description
10-001-GW	Black, Preinked Pad w/holder
10-002-GW	Black, Preinked Pad w/holder
10-003-GW	Uninked pad w/holder
10-004-GW	Felt Insert
10-005-GW	Red Ink, 4 oz. bottle
10-006-GW	Black Ink, 4 oz. bottle
10-007-GW	Changestick
10-008-GW	3/32" Hexdriver
10-009-GW	5/32" Hexdriver
10-010-GW	Ring Pliers
10-011-GW	¾” Snap Ring
10-012-GW	Reverse Numbering Head (6 digits, 2 drop)
10-013-GW	Forward Numbering Head (6 digits, 5 drop)
10-014-GW	Condensed Reverse Numbering Head (8 digits, 4 drop)
10-015-GW	Date Stamp Head (month/day/year)
10-016-GW	5/8" Wave Washer
10-023-GW	Locking Thumbnut
10-026-GW	Roller Shaft
10-027-GW	3/8 “ Set Screw Collar
10-028-GW	Shaft Bushing
10-030-GW	Shaft Bushing w/Spring
10-031-GW	Solid Bottom Roller
10-032-GW	Main Platen Crash Pad
10-033-GW	Main Platen
10-034-GW	Main Platen Grommets
10-035-GW	Main Platen Mount Brackets
10-040-GW	Hand Knob
10-041-GW	5/16" Disc Spring
10-042-GW	5/16" Flat Washer
10-045-GW	Pneumatic Cylinder
10-046-GW	Pneumatic Valve Controller
10-047-GW	Regulator, Manifold, Gauge Assembly w/hose
10-048-GW	3/8 ” Hose (4’ length)
10-049-GW	3/8 “ Hose Quick Connect
10-050-GW	¼ ” Hose (4 ½ ‘ length)
10-051-GW	¼ “ Hose Quick Connect
10-053-GW	Drive Unit Cover
10-054-GW	Print Head Mount Block
10-055-GW	Exit Tray
10-056-GW	Magnetic Tray Side Guides

Part #	Description
10-057-GW	Magnets (2)
10-058-GW	Handwheel
10-059-GW	120V Modular Line Cord
10-066-GW	5A, 250V Slow Blow Fuse
10-068-GW	Impression Control Dial Knob
10-071-GW	½ " Cord Strain Relief
10-084-GW	Accessory Holder w/12 TPI perf blade
10-085-GW	Accessory Holder Adjust Screw
10-086-GW	Blade Mount Hub w/bearing
10-088-GW	Accessory Holder w/idler wheel
10-090-GW	Boss Wheel
10-091-GW	2 TPI Perf. Blade
10-092-GW	4 TPI Perf. Blade
10-093-GW	6 TPI Perf. Blade
10-094-GW	8 TPI Perf. Blade
10-095-GW	12 TPI Perf. Blade
10-096-GW	Microperf (42 TPI) Blade
10-097-GW	Microperf (72 TPI) Blade
10-098-GW	Slit Blade
10-099-GW	Score Blade
10-100-GW	Narrow Score Blade
10-101-GW	Double Score (1/4 " separation) w/Holder & Boss
15-005-GW	Red Quick Drying Ink, 2 oz. Bottle
15-006-GW	Black Quick Drying Ink, 2 oz. Bottle
15-036-GW	¾ " Keyed Drive Unit Mount Shaft
15-037-GW	Anti-Pitch Block
15-038-GW	5/16" Dogged Set Screws
15-039-GW	Drive Unit Mount Block (left/right pitch control)
15-052-GW	Solenoid Mount Angle w/tube (left/right pitch)
30-037-GW	Rubber Foot
40-003-GW	Timing Pulley- 18XL037X3/8
40-103-GW	Timing Pulley- 18XL037X1/2
50-007-GW	Main Structure Shaft
50-009-GW	Shaft Adjust Blocks
50-011-GW	Drive Unit Mount Shaft Bracket
50-014-GW	Boss Wheel Shaft
50-016-GW	Safety Switch/12k
50-018-GW	Exit Stripper
50-019-GW	Cross Shaft
50-020-GW	Exit Rollers Safety Shield
50-021-GW	Timing Belt- 220XL037
50-022-GW	Belt Tensioner

Part #	Description
50-033-GW	Fan Guard
60-007-GW	Conveyor/Actuator Shaft
70-008-GW	1 ½" Feed Pulley
90-005-GW	Stepper Motor
90-007-GW	Motor Guard
90-009-GW	Metal Display Panel
90-010-GW	Main Bottom Roller
90-011-GW	Photocell Reflector
90-012-GW	Accessory Holder Mount Shaft
90-031-GW	Low Profile Tie Mounts
90-032-GW	12V Cooling Fan
90-054-GW	Print Head Mount Screws
90-055-GW	Print Head Rotation Screw
90-059-GW	220V Line Cord
90-060-GW	MSTP Board 120V Connector
90-061-GW	MSTP Board 220V Connector
90-062-GW	Modular Switch w/fuseholder
90-063-GW	Line Filter
90-064-GW	Filter to MSTP Board Cable
90-065-GW	Board Mount Stand-Off
90-082-GW	Wire Transfer Tube
90-083-GW	Drive Shaft Bearing
90-084-GW	Drive Shaft Bearing w/Spring
90-085-GW	Plastic Electrical Guard
92-025-GW	MSTP Board
92-025-GW-X	MSTP Board: Exchange
92-026-GW	MSTP Chip
94-028-GW	LV Voltage Solenoid Board
94-028-GW-X	LV Voltage Solenoid Board: Exchange
94-035-GW	Clear Plastic Screen Cover
94-072-GW	Complete Pneumatic Drive Unit
94-073-GW	Complete Pneumatic Drive Unit w/Reverse #ring Head
94-083-GW	LV Solenoid to MSTP Board Power Cable
94-084-GW	Drive Unit Connection Mount Plate
96-009-GW	Register Board
96-015-GW	Safety Shield w/Shaft
96-017-GW	Register Board Cross Shaft Supports
96-018-GW	Register Board Bearing Blocks
96-023-GW	Register Board Conveyor Spool
98-007-GW	Red - Alternate Push Button Switch
PS-001-GW	Non-Operator Side Plate
PS-002-GW	Operator Side Plate

Part #	Description
PS-003-GW	Non-Operator Side Cover
PS-004-GW	Operator Side Cover w/Guard
PS-005-GW	Start Photocell Bracket
PS-006-GW	Start Photocell Assembly
PS-007-GW	Photocell Assembly
PS-008-GW	4 mf Capacitor
PS-009-GW	8 mf Capacitor
PS-010-GW	Centrifugal Blower
PS-012-GW	ICPU EPROM
PS-013-GW	Display Board
PS-013-GW-X	Display Board: Exchange
PS-014-GW	Display Board Label
PS-015-GW	Telephone Cable- MSTP to Display Board
PS-016-GW	Stand
PS-017-GW	Regular Caster Wheel
PS-018-GW	Locking Caster Wheel
PS-019-GW	Stripper Assembly
PS-020-GW	Photocell Stripper
PS-021-GW	Accessory Holder w/Siliclean Idler Wheel
PS-022-GW	Siliclean Idler Wheel
PS-023-GW	Idler Boss Hub
PS-024-GW	Idler Boss Tire
PS-025-GW	Siliclean Roller Tire/Hub
PS-026-GW	Conveyor Belt
PS-027-GW	Registor Guide
PS-028-GW	Non-Operator Side Stock Guide
PS-029-GW	Alignment Spigot
PS-030-GW	Interface Bracket
PS-031-GW	Interface
PS-032-GW	Blower Duct
PS-033-GW	Blower Guard Assembly
PS-034-GW	Drive Unit Connection Label
PS-035-GW	Side Panel Label
PS-036-GW	Blower Switch
PS-037-GW	O Ring Drive Belt
PS-038-GW	Safety Switch Harness
PS-039-GW	LV Solenoid Connection: Phone Jack to Solenoid
PS-040-GW	LV Solenoid Connection: Board to Phone Jack Connector